

# PRODUCT SPECIFICATIONS

DOC NO. 240419XS0BMREN

# X-SENSE



## Key Features:

- ◆ Supports Connection to SBS50 Base Station for app control or interlink with Link+ Pro and Link+ devices without base station.
- ◆ Voice Alarm with Location Indicator: Clearly announces the location of danger through voice alerts.
- ◆ Voice Prompts for User-Friendly Experience: Provides voice guidance for functions like silence, network setup, location setting, testing, low battery, and fault alerts.
- ◆ Night Mode: LED indicator in standby mode stops blinking during nighttime.
- ◆ Ultra-thin and Compact Design with only 33mm thickness.
- ◆ Photoelectric Smoke Sensor: 10-year lifespan with replaceable batteries.

## Link+ Pro Smoke Alarm with Voice and Location XS0B-MR

### Technical Specifications



CE<sub>25</sub>  
2797 CPR 819939  
CPR-DoP-XS-B01  
EN 14604:2005/AC:2008

RoHS

<b>Power Supply</b>	CR123A lithium battery (replaceable)
<b>Smoke Sensor Type</b>	Photoelectric
<b>Battery Life</b>	5 years (test once a week) (wireless interconnected network) 3–5 years (when connected to base station)
<b>Product Life</b>	10 years
<b>Safety Standards</b>	EN 14604
<b>Operating Temperature</b>	40–100° F (4.4–37.8° C)
<b>Operating Relative Humidity</b>	≤ 85% RH (non-condensing)
<b>Alarm Loudness</b>	≥ 85 dB at 3 m (10 ft) @ 3.2 ± 0.3 kHz pulsing alarm
<b>Silence Duration</b>	≤ 9 minutes
<b>Operating Frequency</b>	869.25–869.3 MHz (10 mW e.r.p.)
<b>App</b>	X-Sense Home Security (both Android and iOS supported)

<b>Smoke Alarm Maximum Number of Interconnected Units</b>	24 wireless units (only compatible with X-Sense wireless alarms)
<b>Base Station Maximum Number of Allowed Units</b>	50 devices can be added to the SBS50 base station including smoke alarms, carbon monoxide alarms and other smart devices.
<b>Transmission Range</b>	Over 1,700 ft (500 m) in open air
<b>Product Weight</b>	178g
<b>Product Dimensions</b>	110 x 110 x 33mm
<b>Package Contents</b>	1 × Alarm Unit (Pre-installed Battery) + 1 × Mounting Bracket + 3 × Screws + 3 × Anchor Plugs + 1 × User Manual

## Working Modes

<b>Powering On</b>	First-time use.	Runs through 2 cycles (red/yellow/green/blue) in sequence.	"Hello from X-Sense." "Location not set. Press the Location button to select a location."
	The battery is replaced.		"Press the Test/Silence button to test."
<b>Setting Location</b>	Location not set.	Flashes red once every 3 seconds.	"Location not set. Press the Location button again to select a location."
	Location set.		" Location set. Press the Location button again to change the set location."
<b>Standby Mode</b>	Flashes green once every 60 seconds.		none.
<b>Alarm Mode</b>	<b>Unit detected smoke and initiated an alarm:</b> Flashes red 3 times every 4 seconds.		"Warning. Smoke detected in Location. Evacuate."
	<b>Smoke concentration level drops:</b> Flashes green once every second for 5 seconds.		"Danger cleared."
	<b>All other interconnected units in the network:</b> Flashes red and green 3 times sequentially every 4 seconds.		"Warning. Smoke detected in Location. Evacuate."
<b>Silence Mode</b>	<b>Smoke silence mode:</b> Flashes red 3 times every 4 seconds.		"Smoke alarm silenced."
	<b>Silence mode during low battery:</b> Flashes yellow once every 60 seconds.		"Temporarily silenced."
	<b>Silence mode during the end of life:</b> Flashes yellow 3 times every 60 seconds.		"Temporarily silenced."
	<b>Exiting silence mode:</b> Flashes green 3 times.		None.

<b>Test Mode (Test a single unit.)</b>	<ul style="list-style-type: none"> <li>• Press the test/silence button on the device.</li> <li>• Tap the Device Test button in the app (for devices connected to the base station).</li> </ul>	1 set of 3 red flashes.	"This is only a test. The alarm will sound loudly. You can press the Test/Silence button to cancel the test. "
	Normal functioning.		"Testing the smoke sensor."
	Low battery.		"The test is finished."
	Smoke sensor malfunction.		"Normal working status."
	End of life.		"Caution. Low battery. Replace the battery now."
<b>Test Mode (Test all interconnected units.)</b>	<b>Initiating alarm:</b> Flashes red rapidly.		"Caution. Smoke sensor malfunction. Replace the device now."
	<b>Other interconnected alarms in the network:</b> Flashes red and green sequentially.		"Caution. The alarm has reached the end of its lifetime. Replace the device now."
<b>Low Battery</b>	Flashes yellow once every 60 seconds.		"This is a test for all units. Please confirm if other units receive this test signal from Location. To cancel, release the Test/Silence button."
<b>Fault</b>	Flashes yellow 2 times every 60 seconds.		"Test signal received from Location, not a real alarm."
<b>End of Life</b>	Flashes yellow 3 times every 60 seconds.		"Caution. Low battery. Replace the battery now."
			"Caution. Smoke sensor malfunction. Replace the device now."
			"Caution. The alarm has reached the end of its lifetime. Replace the device now."

## Sensitivity

<b>Smoke Sensitivity</b>	<b>Air Flow:</b> 0.2m/s
	<b>Sensitivity:</b> 0.102~0.214dB/m
	<b>Smoke Rise Rate:</b> 0.05m/dB/min @AWT1800

## Ordering Information

Part Number	Pack Quantity	Dimension	Weight	Units/Car ton
XS0B-MR - 1 pack	1 x Alarm Unit	116 x 45 x 116 mm	17.5kgs	72 units